

CNA-111B(C) 使用說明書

CNA-111B(C) User's Instruction

注意(Caution) ⚠

感謝您選擇東元產品, 請詳細研讀此說明書, 並正確使用它。

Thank you for selecting TECO product. Please read this instruction before installation.

— 若需要檢修時, 應先切斷電源再進行檢修。

— Turn off power before carrying out any maintenance.

— 使用本產品時, 必需小心輕放, 避免碰撞及掉落。

— Please handle carefully and avoid abnormal vibration and shock.

* CN-100(R)~300+CNA-111B(C) 組裝方法
CN-100(R)~300+CNA-111B(C) Assembly Method
(左, 右側裝配方法皆相同)

(Same install method for left side and right side)


1. 依右圖之箭頭方向將CNA-111B(C)插入組合
According to the right picture to install CNA-111B(C).

2. 螺絲規格依下表鎖付：
Please choose screw type as following and tightening


CNA-111B(C)數量 Amount of CNA-111B(C)	機種 Type	CN(L)-100R~150R	CN(L)-150/180	CN-220/300	CNL-220/300
1只 1 Unit		M3X18	M3X20	M3X20	M3X20
2只 2 Units		M3X30	M3X32	M3X32	M3X32
3只 3 Units		—	—	—	M3X45

表(-)

螺絲規格請參閱表(-)
Please refer to Table 1 for screw specifications.

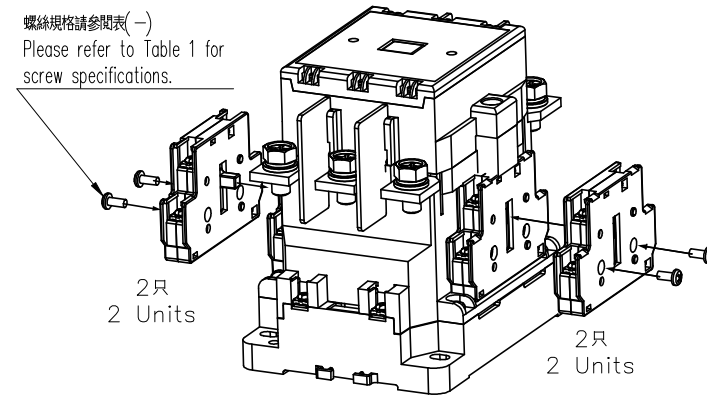

使用的接觸器為可逆式時, CNA-111B(C) 須裝於本體左右兩側
The CNA-111B(C) is installed on the left and rights of the main body when the contactor used is reversing type.

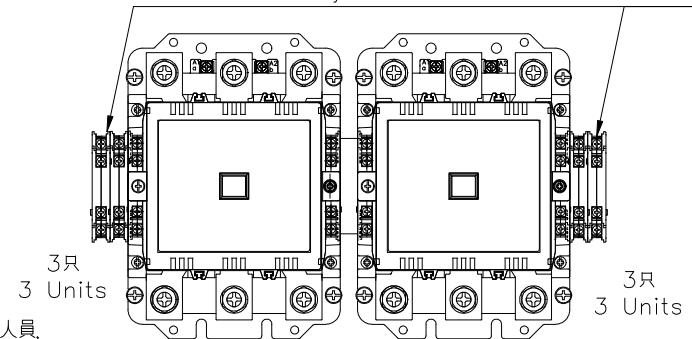

* 依下表鎖線時, 鎖線扭力值如下：

Tightening torques for contactors are given below:

機種 Type	項目 Item	螺絲尺寸 Screw/blot	鎖緊扭力(kgf.cm) Tightening torque
CNA-111B(C)	補助接點 Auxi contact	M3.5	7.5 ~ 11.5

* 使用本產品若有不清楚時, 請參閱產品型錄或洽詢公司營業人員。

For more information, please see the catalogue or contact sales people.

T 886-3-598-1711 F 886-3-598-2488

WWW.teco.com.tw

TECO ELECTRIC & MACHINERY CO., LTD.

FM3 40A199A100