

注意(Caution) ⚠

感謝您選擇東元產品, 請詳細研讀此說明書, 並正確使用它。

Thank you for selecting TECO product. Please read this instruction before installation.

— 若需要檢修時, 應先切斷電源再進行檢修。

— Turn off power before carrying out any maintenance.

— 使用本產品時, 必需小心輕放, 避免碰撞及掉落。


— Please handle carefully and avoid abnormal vibration and shock.

*CU-9~CU-90與CNE-1(或CSS)組裝方法

*CU-9~CU-90 and CNE-1(or CSS) Assembly method.


① 依箭頭方向將CNE-1(或CSS)插入組合

Follow the direction of arrow to install CNE-1(or CSS).

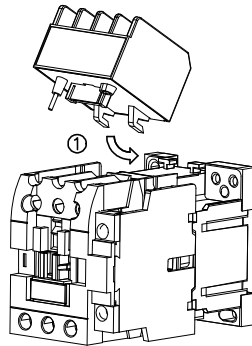


② 將引線插入電磁接觸器本體的線圈端子中

Insert the lead edge into the coil terminal of the electrical contactor body.

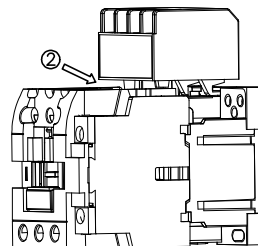

③ 利用起子將線圈螺絲鎖緊

Use a screwdriver to lock the coil screw.

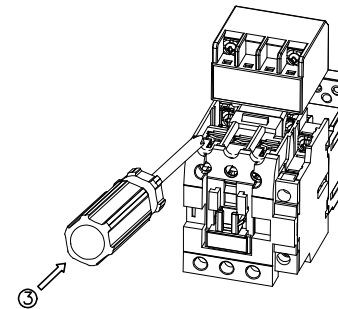

* 依下表鎖線時, 鎖線扭力值如下:

Tightening torques for contactors are given below:

機種 Type	項目 Item	螺絲尺寸 Screw/blot	鎖緊扭力(kgf.cm) Tightening torque
CNE-1, CSS	補助接點 Auxiliary contact	M3.5	7.5 ~ 11.5

* 使用本產品若有不清楚時, 請參閱產品型錄或洽詢公司營業人員。

For more information, please see the catalogue or contact sales people.

T 886-3-598-1711 F 886-3-598-2488

WWW.teco.com.tw